


Mailbox and Post Installation

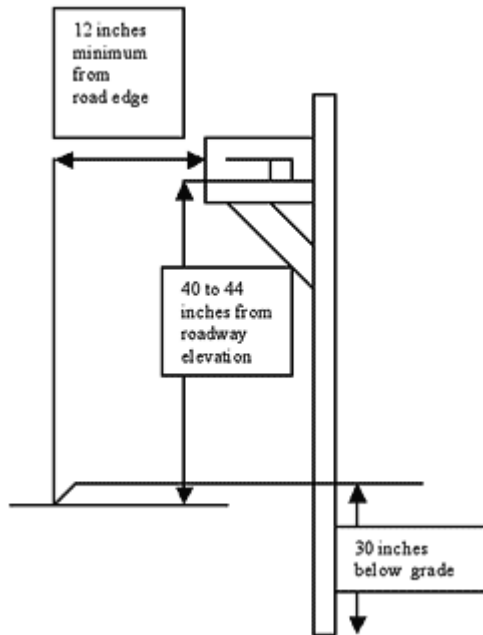

Proper installation and maintenance of your mailbox and post will help to prevent damage during snow removal operations.

The front of the mailbox must be no less than 12 inches and no more than 18 inches from the curb line or edge of roadway.

The bottom of the mailbox must be between 40 and 44 inches above roadway elevation.

The post should be constructed of pressure treated wood, with a minimum of 4 inch by 4 inch post size.

It is recommended that #8 size weather resistant screws should be used during assembly of mailbox and post (do not use nails).